











81515 Kitchen Trolley

Assembly Instructions

HARDWARE

- A  JCBC
M6 x 60mm x8
- B  Wood Dowel
M8 x 30mm x12
- C  Wood Screw
M4 x 35mm x4
- D  2" Locking Caster
x4
- E  Wood Button
M10 x8
- F  Allen Wrench
M4 x1


PARTS

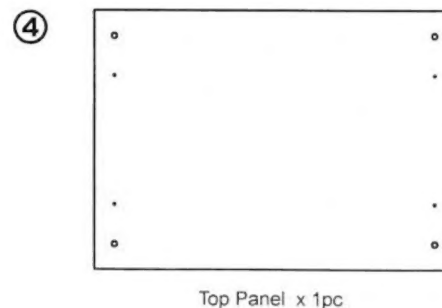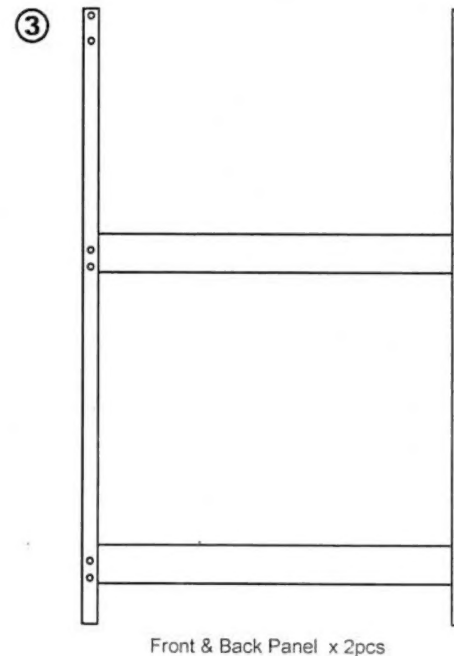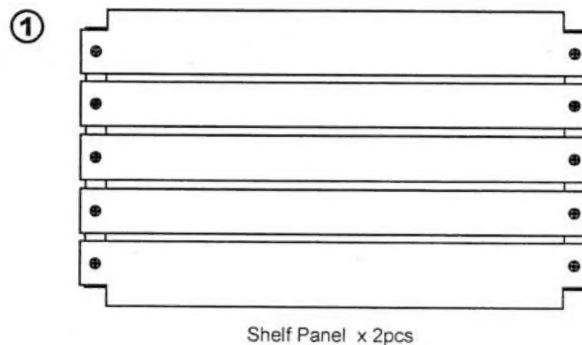

IMPORTANT! DO NOT TIGHTEN SCREWS OR BOLTS UNTIL COMPLETELY ASSEMBLED!!

81515 Kitchen Trolley

Assembly Instructions

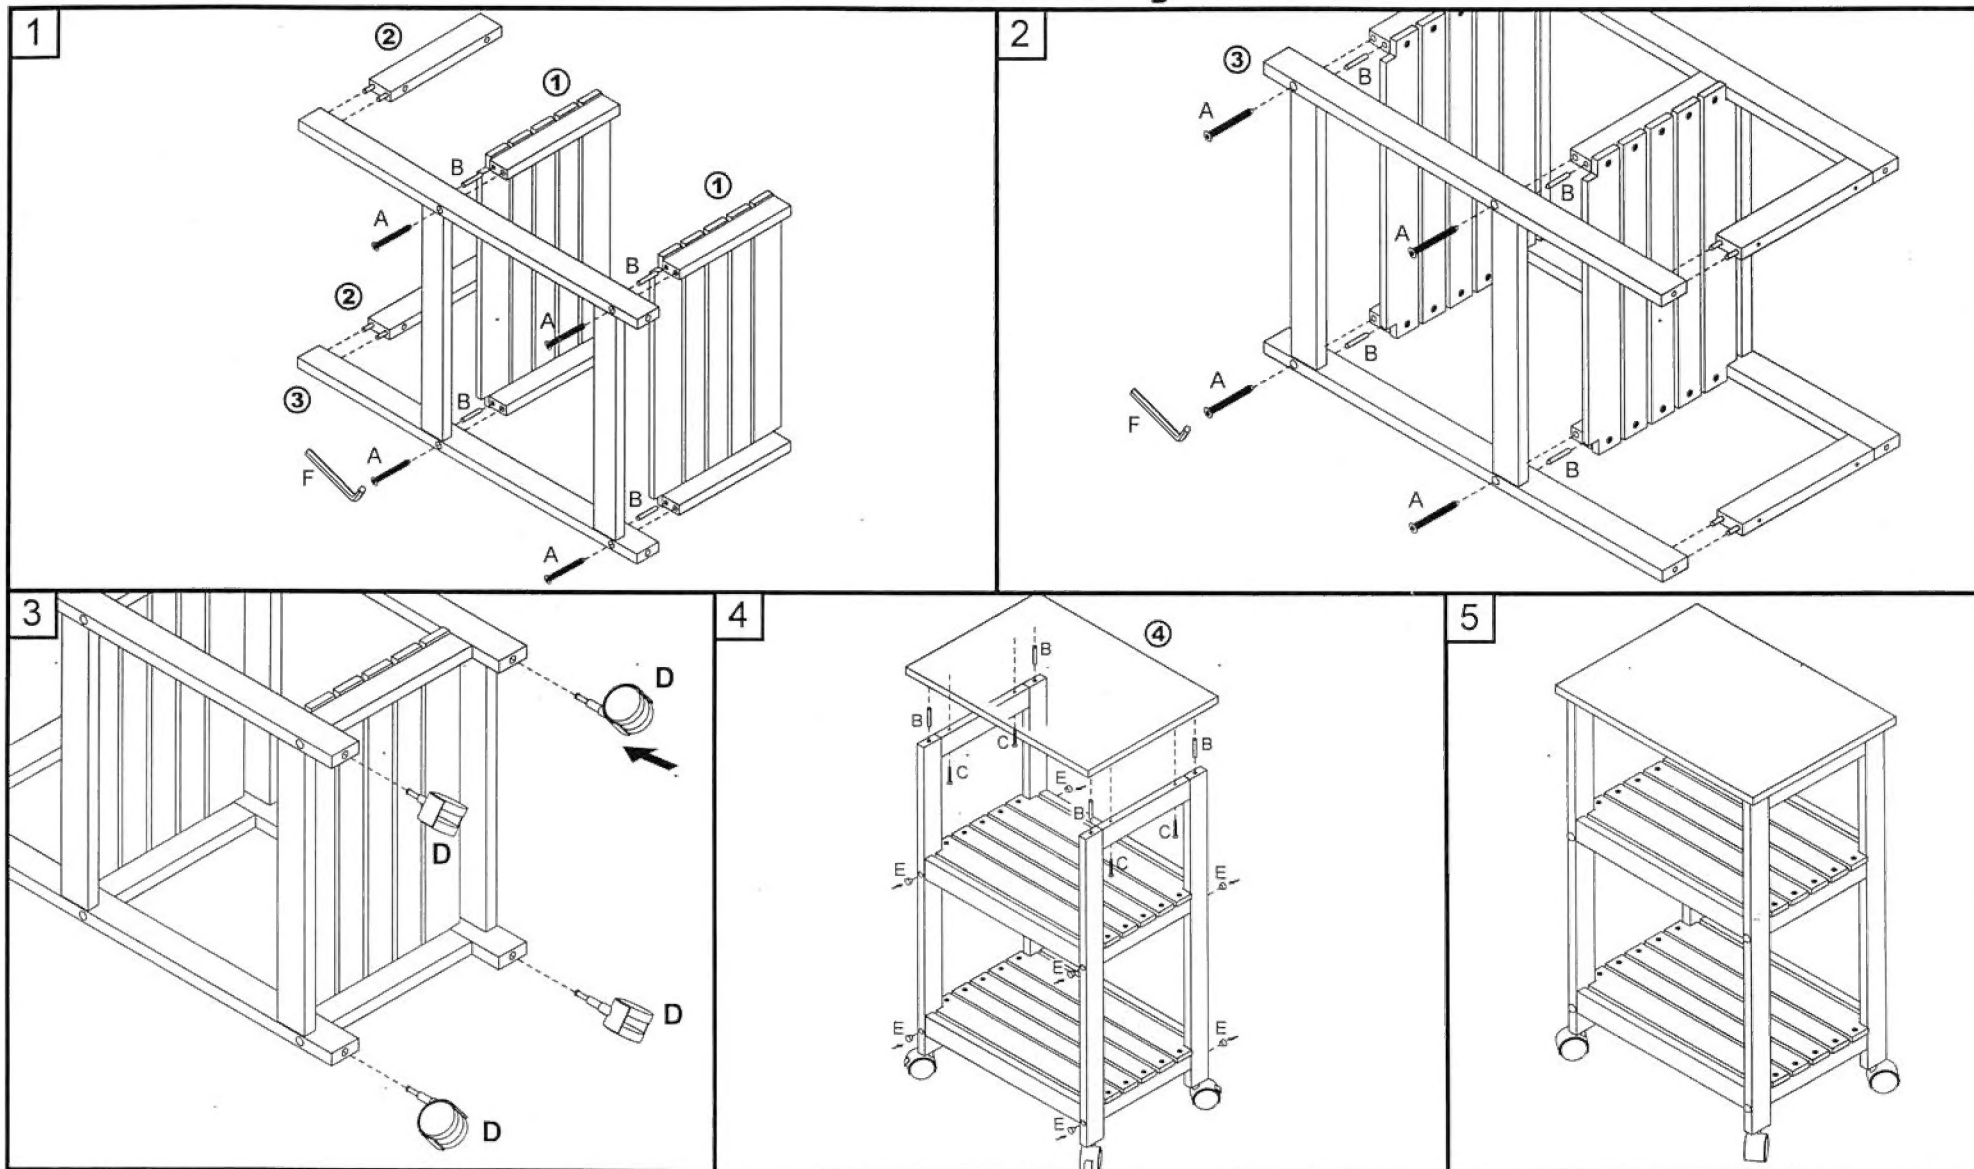

IMPORTANT! DO NOT TIGHTEN SCREWS OR BOLTS UNTIL COMPLETELY ASSEMBLED!!

Customer Service 0607 - 652 7321